

OCTAFLY COLD WHITE

DMX CONTROL TABLE



3-CH Mode					
CH1	Master Dimmer	000	-	255	Master Dimmer 0 - 100%
CH2	Auto Programs	000	-	009	No Function
		010	-	018	Auto 1
		019	-	027	Auto 2
		028	-	036	Auto 3
		037	-	045	Auto 4
		046	-	054	Auto 5
		055	-	063	Auto 6
		064	-	072	Auto 7
		071	-	081	Auto 8
		082	-	090	Auto 9
		091	-	099	Auto 10
		100	-	108	Auto 11
		109	-	117	Auto 12
		118	-	126	Auto 13
		127	-	135	Auto 14
		136	-	144	Auto 15
		145	-	153	Auto 16
		154	-	162	Auto 17
		163	-	171	Auto 18
		172	-	180	Auto 19
		181	-	189	Auto 20
		190	-	198	Auto 21
		199	-	207	Auto 22
		208	-	216	Auto 23
		217	-	225	Auto 24
		226	-	234	Auto 25
		235	-	255	Sound Control
CH3	Speed/Sensitivity	000	-	255	Auto Programs Speed 0 - 100% / Microphone Sensitivity 0 - 100%

6-CH Mode					
CH1	Mechanic Control	000	-	255	Tilt 1 Rotation
CH2		000	-	255	Tilt 2 Rotation
CH3	Master Dimmer (affects CH5)	000	-	255	Master Dimmer 0 - 100% (all LEDs)
CH4	Strobe	000	-	009	No Function (open)
		010	-	255	Strobe slow - fast (1Hz - 25Hz)

CH5	Auto Programs	000	-	009	No Function
		010	-	018	Auto 1
		019	-	027	Auto 2
		028	-	036	Auto 3
		037	-	045	Auto 4
		046	-	054	Auto 5
		055	-	063	Auto 6
		064	-	072	Auto 7
		071	-	081	Auto 8
		082	-	090	Auto 9
		091	-	099	Auto 10
		100	-	108	Auto 11
		109	-	117	Auto 12
		118	-	126	Auto 13
		127	-	135	Auto 14
		136	-	144	Auto 15
		145	-	153	Auto 16
		154	-	162	Auto 17
		163	-	171	Auto 18
		172	-	180	Auto 19
		181	-	189	Auto 20
		190	-	198	Auto 21
		199	-	207	Auto 22
		208	-	216	Auto 23
		217	-	225	Auto 24
		226	-	234	Auto 25
		235	-	255	Sound Control
CH6	Speed/Sensitivity	000	-	255	Auto Programs Speed 0 - 100% / Microphone Sensitivity 0 - 100%

14-CH Mode					
CH1	Mechanic Control	000	-	255	Tilt 1 Rotation
CH2		000	-	255	Tilt 2 Rotation
CH3	Master Dimmer (affects CH5 - CH13)	000	-	255	Master Dimmer 0 - 100%
CH4	Strobe	000	-	009	No Function (open)
		010	-	255	Strobe slow - fast (1Hz - 25Hz)
CH5	Dimmer	000	-	255	LED 1
CH6	Dimmer	000	-	255	LED 2
CH7	Dimmer	000	-	255	LED 3
CH8	Dimmer	000	-	255	LED 4
CH9	Dimmer	000	-	255	LED 5
CH10	Dimmer	000	-	255	LED 6
CH11	Dimmer	000	-	255	LED 7
CH12	Dimmer	000	-	255	LED 8

CH13	Auto Programs (priority over CH4 - CH12)	000	-	009	No Function
		010	-	018	Auto 1
		019	-	027	Auto 2
		028	-	036	Auto 3
		037	-	045	Auto 4
		046	-	054	Auto 5
		055	-	063	Auto 6
		064	-	072	Auto 7
		071	-	081	Auto 8
		082	-	090	Auto 9
		091	-	099	Auto 10
		100	-	108	Auto 11
		109	-	117	Auto 12
		118	-	126	Auto 13
		127	-	135	Auto 14
		136	-	144	Auto 15
		145	-	153	Auto 16
		154	-	162	Auto 17
		163	-	171	Auto 18
		172	-	180	Auto 19
		181	-	189	Auto 20
		190	-	198	Auto 21
		199	-	207	Auto 22
		208	-	216	Auto 23
		217	-	225	Auto 24
		226	-	234	Auto 25
		235	-	255	Sound Control
CH14	Speed/Sensitivity	000	-	255	Auto Programs Speed 0 - 100% / Microphone Sensitivity 0 - 100%